

RQ5-57L	Inner lwr rear 1957 11" H x 26" L LH	215.00
RQ5A-56R	Rear filler piece RH 56	64.75
RQ5A-56L	Rear filler piece LH 56	64.75
RQ5B-57R	Rear filler piece RH 57	47.50
RQ5B-57L	Rear filler piece LH 57	47.50

OUTER LOWER REAR QUARTER

RQ6-55R	1955 11"H x 18" L RH	120.00
RQ6-56R	1956 11"H x 19" L RH	144.50
RQ6-57R	1957 11"H x 26" L RH	125.00
RQ6-55L	1955 11"H x 18" L LH	120.00
RQ6-56L	1956 11"H x 19" L LH	144.50
RQ6-57L	1957 11"H x 26" L LH	125.00

TRUNK PANELS


T1-556	Trunk floor 55/56 38"w x 25"d in flat w/ribs w/correct fuel opening as original	360.00
T1A-556R	Trunk side ramp 55/56 RH	115.00
T1A-556L	Trunk side ramp 55/56 LH	115.00
T1B-556R	Trunk corner 55/56 RH	105.00
T1B-556L	Trunk corner 55/56 LH	105.00
T1C-556R	Trunk rear valance end RH 55/56	175.00
T1C-556L	Trunk rear valance end LH 55/56	175.00
T1D-556	Trunk fuel tank locator	25.00
T1E-556R	Rear pan ends only RH 55/56	95.00
T1E-556L	Rear pan ends only LH 55/56	95.00
T1F-556	Rear pan center only 55/56	265.00
T2-57	Trunk floor 1957 38"w x 25"d	330.00
T2A-57R	Trunk side ramp 57 RH	115.00
T2A-57L	Trunk side ramp 57 LH	115.00
T2B-57R	Trunk corner 57 RH	155.00
T2B-57L	Trunk corner 57 LH	155.00

FB8-57	Trunk floor brace 57" long 1957	140.00
FB9-57	Trunk floor brace 8" long 1957	26.50
FB10-567	Reinforcement behind seat	56.10
8214	Nose panel	407.15
16005-AP	Front fender panel section RH 55	200.00
16005-BP*	Front fender panel section RH 56/57	250.00
16006-AP	Front fender panel section LH 55	200.00
16006-BP*	Front fender panel section LH 56/57	250.00
*56/57 has opening for vent door		
20124-B	Door bottom repair panel W/20125C-RH	50.00
20125-B	Door bottom repair panel W/20125C-LH	50.00
20125-C	Weatherstrip retainer bottom of door	20.00
20200-A	Door skin lower RH	125.00
20201-A	Door skin lower LH	125.00

BODY SECTION

10128	Rocker panel original FOMOCO RH	250.00
10129	Rocker panel original FOMOCO LH	Call
11135-AK	Floor & cowl rubber plug kit 10pc 55/56	13.15
11135-BK	Floor & cowl rubber plug kit 11 pc 57	14.40
11135-CK	Same as above concurs correct	16.50
11136-K	Plugs quarter panel drain 55/57	5.45

11215-A	Brace trunk floor to rear panel 55/56	24.00
11215-B	Brckt spare wheel bolt welds to trnk floor 55	6.95
11215-C	Support spare wheel welds to trunk floor 55	6.95
11215-D	Brckt jack strap rtnr welds to trunk floor 55/56	3.25
11215-D7	Brckt jack strap rtnr welds to trunk floor 57	3.25
11215-E	Bracket jack post welds to w/house	1.25
11215-F-LH	Repair panel forward trunk body mount LH	46.75
11215-F-RH	Repair panel forward trunk body mount RH	46.75
11215-G	Reinforcement plate & studs for swing bar foot mounts under trunk floor	26.00
11215-P	Plug wheel well 57	1.50

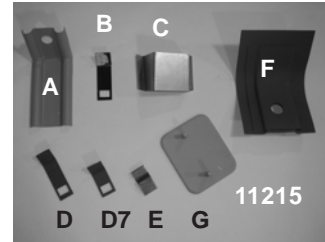

11290	Cover fuel guage on trunk floor	9.95
12128	Plug floor access hole	11.50
13208-C	Sill (step) plate door RH	34.95
13209-C	Sill (step) plate door LH	34.95



K-32	Kit step plates to body	2.00
13398	Bmprs trnk 55/56 pr; FOMOCO oval & screws	7.65
20124	Door shell used RH	Call
20124-B	Repair panel door bottom w/20125-C RH	50.00
20125	Door shell used LH	Call
20125-B	Repair panel door bottom w/20125-C LH	50.00
20125-C	Weatherstrip retainer bottom of door	20.00
20314-AR	Door pillar (post) 55 RH repro	186.50
20314-B	Door pillar (post) 56/57 RH USA Made	239.95
20314-BR	Door pillar (post) 56/57 RH repro	189.95
20315-AR	Door pillar (post) 55 LH repro	186.50
20315-B	Door pillar (post) 56/57 LH USA Made	239.95
20315-BR	Door pillar (post) 56/57 LH repro	189.95
20316	Bracket door post mounting RH used	25.00
20317	Bracket door post mounting LH used	25.00
20320	Bracket door pillar to door RH	12.95
20321	Bracket door pillar to door LH	12.95
20330	Weatherstrip door pillar original size	2.45
20530	Weatherstrip door RH	32.50
20530-1	Weatherstrip best quality pair	65.00
20531	Weatherstrip Door LH	32.50

DOOR WEATHERSTRIP KIT

Includes: 2-20330; 1-20530-1; 1-20570; 1-20571; 2-22428; 2-22448; 2-22478; 2-18912

20532-K 1955-5783.90

20570	Weatherstrip on door at belt RH 56/57	2.75
20571	Weatherstrip on door at belt LH 56/57	2.75

